

How to set up current Time:

- 1) In OFF position press the "Mode" button (the days flash)
- 2) Use "+" and "-" to set the Day
- 3) Press OK
- 4) Use "+" and "-" to set the Hours
- 5) Press OK
- 6) Use "+" and "-" to set the minutes
- 7) Press OK
- 8) To exit from time setting mode, Press "ON/OFF" button briefly

How to set up the Timer & Temperature:

- 1) Press ON/OFF to switch on the heater
- 2) Use "+" and "-" to set up COMFORT temperature you like (normally 19-21C)
If you leave heater in this mode, it will be heating up all the time up to 21C.
- 3) Press OK
- 4) Use "+" and "-" to set up temperature of FROST PROTECTION (normally 5-8C)
If you leave heater in this mode, it will be heating up all the time up to 8C.
- 5) Press OK
- 6) Use "+" and "-" to set up ECONOMICAL temperature you like (normally 15-17C)
If you leave heater in this mode, it will be heating up all the time up to 17C.
- 7) Press OK – Now heater is running on a Timer. (AUTO mode)
- 8) Press "PROG" 2nd small button to adjust the timer settings (display shows 00:00)
- 9) Press 1st small button to set Comfort mode for time from 12pm till 1am, press once again to keep comfort mode from 1am till 2am and so on.; **Use comfort mode when you want to get the Heat at specified hours.**
or
Press 2nd small button to set Economy mode for the time from 12pm till 1am, press once again to keep economy mode from 1am till 2am and so on.; **Use Economy mode if you want to get the Heat just for the background.**
or
Press 3rd small button to set Frost protection mode for time from 12pm till 1am, press once again to keep frost protection mode from 1am till 2am and so on.; **Use Frost protection mode if you don't want to get the Heat.**
- 10) Press OK to save these settings for Monday. You can copy the settings from one day to another by holding OK button for 3 seconds.
- 11) Program all seven days and press Ok. Timer is set and running now. (Display shows "AUTO" mode and Current Temperature).